
Remotii RM6 - mounting stencil

Print this page at Actual size (100 %, not Fit to page) on Letter or A4 paper. The two bars under the stencil must measure exactly 50 mm and 2 in - if they do not, the holes will be in the wrong place.

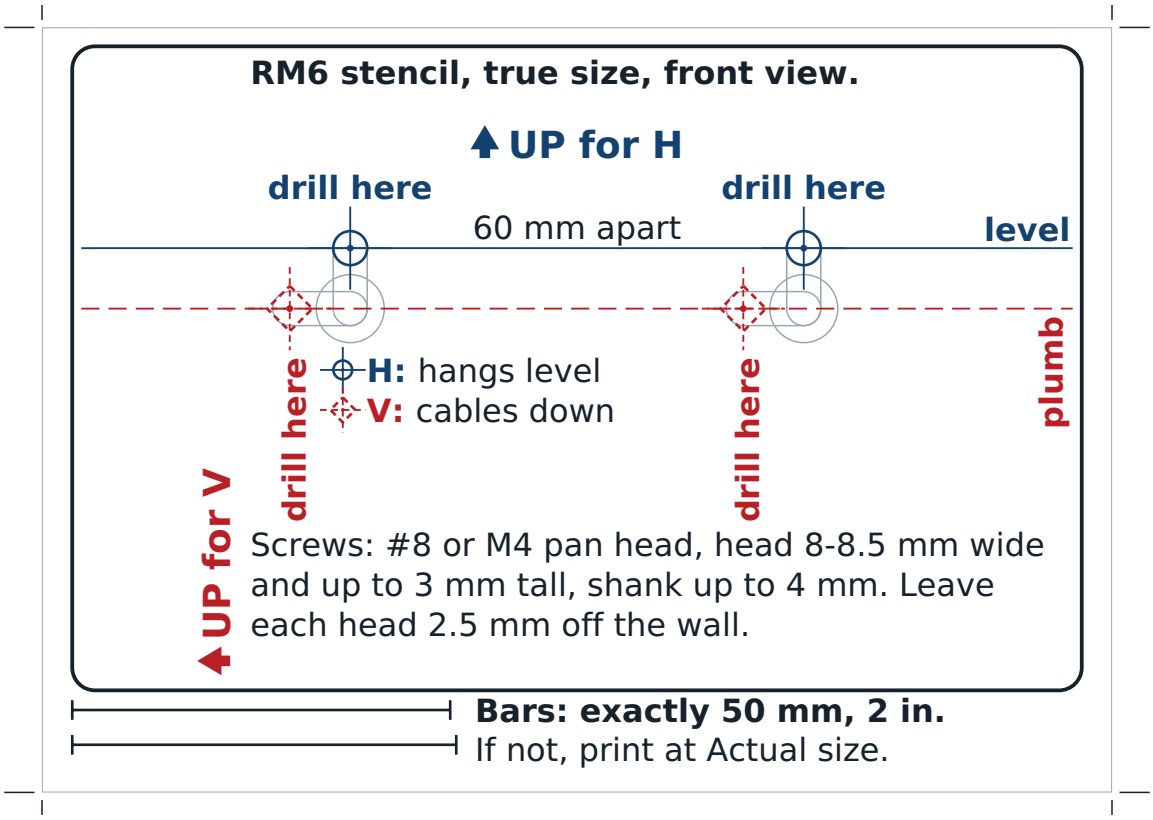

1. Cut out the stencil on the grey line. The outline is the case's back, true size, as you see it from the front - facing the wall.
2. Choose which way up. H (navy, solid circles): the case hangs level, the logo upright, USB-C and power on the right. V (red, dashed diamonds): it hangs upright, USB-C and power at the bottom - turn the sheet a quarter turn clockwise, so that "UP for V" reads the right way up.
3. Tape it to the wall where the case goes. With a spirit level, check the line through your two marks: level for H, straight up and down (plumb) for V.
4. Drill through the centres of your two marks (60 mm apart), fit wall plugs if the wall needs them, and take the stencil off.
5. Screws: two #8 or M4 pan-head screws. The head 8 to 8.5 mm across (it must pass the 9 mm hole) and no more than 3 mm tall; the shank no more than 4 mm (the slot is 4.5 mm). Drive each one in until its head stands 2.5 mm off the wall.
6. Offer the case up over both heads, into the round holes, and slide it down until it stops (8 mm).